


CareView[®] 1500C


Quick Installation Guide




Interface Cable

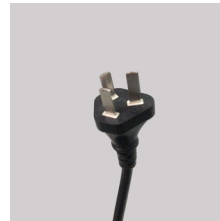

Power Cable

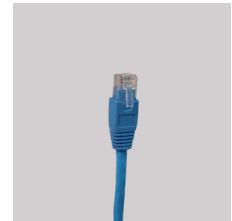

Network Cable

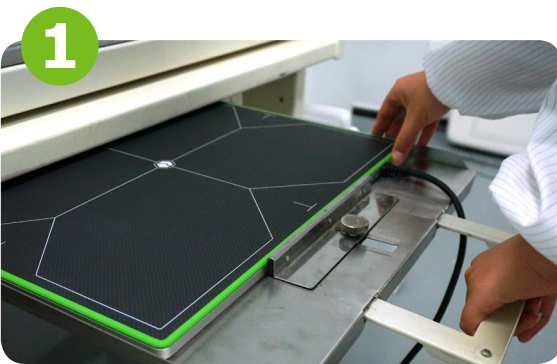

Insert 1500C into the bucky.




Connect the interface cable, keep two red dot inline.



Plug the interface cable into the power box.



Plug the power cord into the socket.

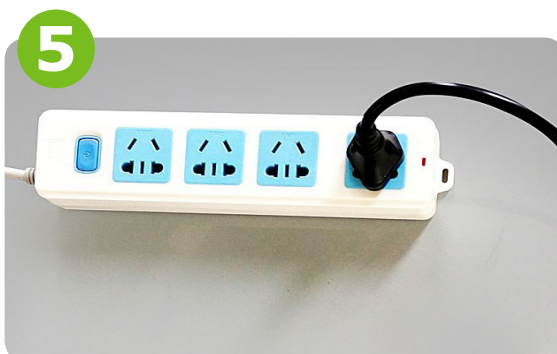

Plug the power cable to socket.




Plug the network cable into power box.

7




Connect the network cable and PC.

8

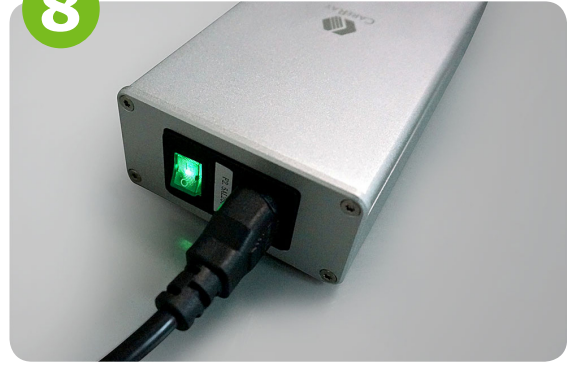

Switch on the power box and PC.

When Installation Completed:

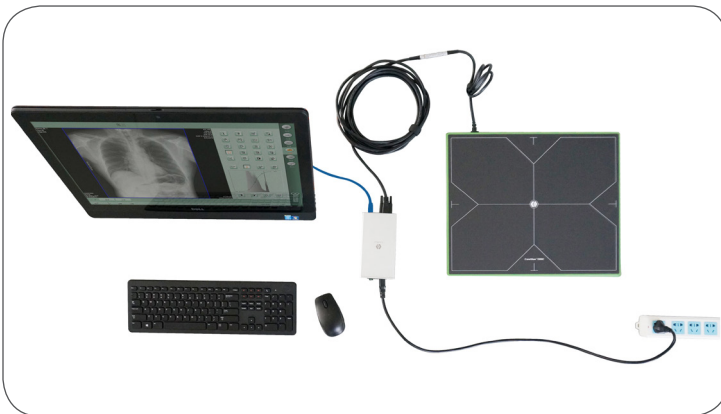

Accessories:

- Power Box Cable
- Power Box
- Interface Cable
- Network Cable

Please Note That:



- The LED indicator should be shining if the detector is properly powered on.
- When disconnecting the cable, grasp the metal part and pull, do not pull at the rubber part.

Above content is subject to change without prior notice. All rights reserved. Copyright © Careray Inc 2016.

CareRay Digital Medical System Co., Ltd.

#3-3001 Winchester Blvd.
Campbell, California USA 95008.
Tel: +1 604-343-3656

